

RMIS View/Print Document Cover Sheet

This document was retrieved from the Documentation and Records Management (DRM) ISEARCH System. It is intended for Information only and may not be the most recent or updated version. Contact a Document Service Center (see Hanford Info for locations) if you need additional retrieval information.

Accession #: D295186475

Document #: SD-WM-OTR-183

Title/Desc:

ACCEPTANCE & OPERATIONAL TEST REPORT FOR TANK
241AN105 CAMERA & CAMERA PURGE CONTROL SYSTEM

Pages: 25

2. To: (Receiving Organization) Distribution		3. From: (Originating Organization) Surveillance Systems Engineering/74770		4. Related EDT No.: 611260	
5. Proj./Prog./Dept./Div.: TWRS Design Basis Integration		6. Cog. Engr.: JL Castleberry		7. Purchase Order No.: N/A	
8. Originator Remarks: ETN-94-0171 The attached Acceptance/Operational Test Report for the 241-AN-105 Camera System and Purge Control System is being distributed for approval and release.				9. Equip./Component No.: N/A	
11. Receiver Remarks:				10. System/Bldg./Facility: 241-AN-105	
				12. Major Assm. Dwg. No.: N/A	
				13. Permit/Permit Application No.: N/A	
				14. Required Response Date: N/A	

15. DATA TRANSMITTED					(F)	(G)	(H)	(I)
(A) Item No.	(B) Document/Drawing No.	(C) Sheet No.	(D) Rev. No.	(E) Title or Description of Data Transmitted	Approval Designator	Reason for Transmittal	Originator Disposition	Receiver Disposition
1	WHC-SD-WM-OTR-183	all	0	Acceptance/Operational Test Report for Tank 241-AN-105 Camera and Camera Purge Control System	N/A	3	1	

16. KEY		
Approval Designator (F)	Reason for Transmittal (G)	Disposition (H) & (I)
E, S, Q, D or N/A (see WHC-CM-3-5, Sec.12.7)	1. Approval 2. Release 3. Information 4. Review 5. Post-Review 6. Dist. (Receipt Acknow. Required)	1. Approved 2. Approved w/comment 3. Disapproved w/comment 4. Reviewed no/comment 5. Reviewed w/comment 6. Receipt acknowledged

17. SIGNATURE/DISTRIBUTION (See Approval Designator for required signatures)											
(G)	(H)	(J) Name	(K) Signature	(L) Date	(M) MSIN	(J) Name	(K) Signature	(L) Date	(M) MSIN	Reason	Disp.
1	1	Cog. Eng. JL Castleberry		11/16/95	N1-46						
1	1	Cog. Mgr. TL Moore		11/16/95	N1-09						
		QA									
		Safety									
		Env.									
1	1	DB Smet		11-16-95	N1-46						
1	1	RS Nicholson		11/16/95	N1-67						

18. Signature of EDT Originator Date: 11/16/95		19. Authorized Representative for Receiving Organization Date: 11/16/95		20. Cognizant Manager Date: 11/16/95		21. DOE APPROVAL (if required) Ctrl. No. <input checked="" type="checkbox"/> Approved <input type="checkbox"/> Approved w/comments <input type="checkbox"/> Disapproved w/comments	
---	--	--	--	---	--	--	--

RELEASE AUTHORIZATION

Document Number: WHC-SD-WM-OTR-183, REV 0

Document Title: Acceptance/Operational Test Report for Tank 241-AN-105 Camera and Camera Purge Control System

Release Date: 11/16/95

This document was reviewed following the procedures described in WHC-CM-3-4 and is:

APPROVED FOR PUBLIC RELEASE

WHC Information Release Administration Specialist:


Kara Broz


11/16/95

TRADEMARK DISCLAIMER. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof or its contractors or subcontractors.

This report has been reproduced from the best available copy. Available in paper copy. Printed in the United States of America. To obtain copies of this report, contact:

Westinghouse Hanford Company - Document Control Services
P.O. Box 1970, Mailstop H6-08, Richland, WA 99352
Telephone: (509) 372-2420; Fax: (509) 376-4989

SUPPORTING DOCUMENT

1. Total Pages 21

2. Title

Acceptance/Operational Test Report for Tank
241-AN-105 Camera and Camera Purge Control System

3. Number

WHC-SD-WM-OTR-183

4. Rev No.

0

5. Key Words

Camera System
Purge Control System
Tank 241-AN-105
Acceptance Test
Operational Test
ETN-94-0171

6. Author

Name: JL Castleberry


Signature

Organization/Charge Code 74770/N2089

7. Abstract

This Acceptance/Operational Test Report documents the successful acceptance and operability testing of the 241-AN-105 camera system and camera purge control system.

8.

RELEASE STAMP

OFFICIAL RELEASE 
BY WHC
DATE NOV 16 1995

At 4.

WHC-SD-WM-OTR-183
REV. 0

ACCEPTANCE/OPERATIONAL TEST FOR
105-AN CAMERA AND CAMERA PURGE CONTROL
SYSTEM

ETN-94-0171

TABLE OF CONTENTS

1.0 PURPOSE	1
2.0 TEST OBJECTIVES	2
3.0 REFERENCES	2
4.0 RESPONSIBILITIES	2
4.1 SYSTEMS SURVEILLANCE ENGINEERING	2
4.2 TEST WITNESSES	2
5.0 DOCUMENTATION	3
5.1 TEST RECORD	3
5.2 EXCEPTIONS	3
5.3 TEST EXECUTION RECORD	3
6.0 PREREQUISITE	4
6.1 400 AREA TEST PURGE PANEL	4
6.2 SHOP TEST - PURGE PANEL	5
6.3 SHOP TEST - PURGE CONTROL PANEL	6
6.4 SHOP TEST- MASTER CONTROL STATION	7
6.5 SHOP TEST - CAMERA AND PAN & TILT	8
7.0 ACCEPTANCE/OPERABILITY TEST	10
7.1 PURGE PANEL ACCEPTANCE	10
7.2 PURGE CONTROL PANEL ACCEPTANCE	10
7.3 CAMERA AND PAN AND TILT ACCEPTANCE	11
8.0 EXCEPTIONS	14
9.0 RECORDS	15
10.0 TEST EXECUTION RECORD	16
11.0 POST INSTALLATION TEST	17
FIGURE 1	18

ACCEPTANCE/OPERATIONAL TEST PROCEDURE
105-AN TANK CAMERA PURGE SYSTEM
AND 105-AN VIDEO CAMERA SYSTEM

1.0 PURPOSE

This Acceptance/Operational Test Procedure (ATP/OTP) will document the satisfactory operation of the camera purge panel, purge control panel, color camera system and associated control components destined for installation. The final acceptance of the complete system will be performed in the field. The purge panel and purge control panel will be tested for its safety interlock which shuts down the camera and pan-and-tilt inside the tank vapor space during loss of purge pressure and that the correct purge volume exchanges are performed as required by NFPA 496. This procedure is separated into seven sections (6.1, 6.2, 6.3, 6.4, 6.5, 7.1, 7.2 and 7.3) identified below:

- 1) Section 6.1 is performed in the 400 Area on the AN-105 purge panel prior to delivery to the 306 building for system shop testing. This section involves the following:
 - Leak checking all fittings on the Purge Panel for leakage using a "Snoop" solution and resolving the leakage at a pressure of 10 ± 2 psig.
 - Purge panel instrumentation has been calibrated and calibration stickers have been affixed.
- 2) Sections 6.2, 6.3, 6.4, and 6.5 test the purge panel and purge control panel for pressure settings, time delay relay settings, camera interface and camera system operation. Sections 6.2, 6.3, 6.4, and 6.5 will be performed in the 306E building.
- 3) Section 7.1 verifies that PR-1, the regulator which maintains a positive pressure within the volume (camera and pneumatic lines), is properly set. In addition the yellow light (PRESSURIZED) (located on the Purge Control Panel) is verified to turn on at 10 ± 2 in. w.g. and after the time delay relays (TDR-1 and TDR-2) have timed out. Section 7.1 will be performed in the AN tank farm at 200 East Area.
- 4) Section 7.2 verifies that the purge cycle functions properly, the green light (PURGING) comes on, and that the correct flowrate is obtained to trip the flowswitch. Section 7.2 will be performed in the AN tank farm at 200 East Area.

- 5) Section 7.3 verifies that the pan and tilt, camera, associated controls and components operate correctly. This section also verifies that the safety interlock system operates correctly during loss of purge pressure. Section 7.3 will be performed in the AN tank farm at 200 East Area.

2.0 TEST OBJECTIVES

- 2.1 The objective of this procedure is to demonstrate and document the acceptance and operability of the 241-AN-105 camera system and Camera Purge System (CPS). The camera focus, zoom, and iris remote controls will be functionally tested. The resolution and color rendition of the camera will be verified using standard reference charts. The pan-and-tilt unit will be tested for required ranges of motion, and the camera lights will be functionally tested.

3.0 REFERENCES

P&ID	H-14-020601
Electrical Drawings	H-14-030601
Mechanical Drawing	H-14-100158

4.0 RESPONSIBILITIES

4.1 SYSTEMS SURVEILLANCE ENGINEERING

A Systems Surveillance Engineering (SSE) Test Engineer shall be responsible for the coordination, scheduling, performance and documentation of this test procedure. The Purge System Engineer will be responsible for acceptance of section 6.1.

4.2 TEST WITNESSES

Tank Farm Operations and Quality Assurance will provide a representative to witness the satisfactory completion and approval of pertinent steps identified in this ATP/OTP.

Witnesses are responsible for verifying that organizational requirements are met throughout the testing and documentation sequences of the procedure.

5.0 DOCUMENTATION

5.1 TEST RECORD

All personnel involved in the performance of this test including the SSE Test Engineer shall fill out a line in Section 9.0 RECORDS.

Test results shall be recorded by the SSE Test Engineer. Unless specific data is required, the initials of the person accepting the item will be entered in each test sheet blank to indicate compliance with the stated requirements or the successful completion of the given test step. Unacceptable conditions or readings are to be referred to Section 8.0, EXCEPTIONS. A complete working copy of this procedure and all exception records generated shall be maintained as permanent records in accordance with WHC-CM-3-5.

5.2 EXCEPTIONS

Exceptions by step number, and other notes are to be recorded under Section 8.0. This section must be dispositioned (including the generation of any required ECNs) and signed off prior to final ATP/OTP acceptance. If no exceptions are encountered, this section shall be so noted and closed out with the required signatures. During the performance of this test, errors in text may be encountered which require correction/adjustment to complete the test. The correction is to be noted in the ATP/OTP and listed as an exception in Section 8.0.

5.3 TEST EXECUTION RECORD

Approval of the ATP/OTP results shall be accepted by the Tank Farm Manager as indicated by signature in Section 10.0.

6.0 PREREQUISITES

6.1 TEST PURGE PANEL

NOTE: Sequence of steps in section 6.1 can be altered per the Purge System Engineer discretion.

6.1.1 Pressurize each leg (supply and return side) of the Purge Panel to approximately 10 psig and "Snoop" each fitting and resolve any leakage by tightening the fitting. If the leakage continues then replace the fitting. Purge System Engineer signoff below that the Purge Panel is acceptable.

Purge System
Engineer  Date 9/12/95

6.1.2 Purge System Engineer signoff below that the instrumentation listed below has been calibrated and a calibration sticker has been affixed.

- Pressure Switch Pt. No. H-14-100158-11 is set to 10 ± 2 in. w.g..
- A 4-20mA Calibration Curve performed on pressure transmitter Pt. No. H-14-100158-10.
- Pressure Gage, Pt. No. H-14-100158-14.
- Pressure Gage, Pt. No. H-14-100158-15.
- Flowmeter, Pt. No. H-14-100158-9.
- Flowswitch, Pt. No. H-14-100158-7 set to 1.5 cfm.

Purge System
Engineer  Date 9/11/95

6.1.3 Test Relief Valve, Pt. No. H-14-100158-62.

- A. Attach a hose or hard line to the pressure relief valve vent line and insert it into a beaker of water. (See Figure 1).
- B. With the relief valve installed on the purge panel, slowly supply an air or argon pressure of up to 20 ± 2 psig on the return side and record below the pressure where the bubbles are first noticed. Continue to increase pressure and record below the flow as read from the flowmeter at 20 ± 2 psig.

Pt. No. H-14-100158-62

Pressure: 20 psi

Flow at 20 ± 2 psig: Unable to obtain flow reading. *PP*

6.1.4 Purge System Engineer signoff below that Section 6.1 has been performed satisfactorily.

Purge System Engineer *[Signature]* / Date 9/12/95

6.2 SHOP TEST - PURGE PANEL

NOTE: Sections 6.2, 6.3, 6.4, and 6.5 are performed in the 306E building.

- 6.2.1 Connect a full K-size N_2 bottle or dry air to the purge panel and 120 VAC power to the Purge Control Panel (PCP). Connect camera and lighting circuits to PCP switched power outlet.
- 6.2.2 Open the N_2 bottle or dry air supply valve and adjust PR-2 to 45 ± 5 psig.
- 6.2.3 Adjust PR-1 to 15 ± 3 in. w.g read off of pressure transmitter, H-14-100158-10. It may be necessary to open the calibration port valve, Pt. No. H-14-100158-20 to decrease pressure.

6.2.4 SSE Test Engineer signoff below that Section 6.2 has been performed satisfactorily.

SSE Test Engineer [Signature] /Date 9/12/95

6.3 SHOP TEST - PURGE CONTROL PANEL

NOTE: The volume of the camera housing, purge panel lines and the hoses is approximately 2.0 ft.³ [1.1 ft.³ (camera volume) + .16 ft.³ (purge panel lines volume) + .41 ft.³ (hose volume)]. Per NFPA 496 requirements, ten volumes of purge gas, 20 ft.³, must flow through the assembly. PR-2 will be adjusted so that the flowswitch is tripped at a min. flow of 1.5 cfm through the camera system. TDR-2 is adjusted to 14 minutes (20 ft.³/1.5 cfm) to flow 20 ft.³.

6.3.1 TDR-1 and TDR-2 will be adjusted to 5 minutes instead of 14 minutes to save purge gas. At the Purge Control Panel set the time delay relays (TDR 1 and TDR 2) to 5 minutes and turn the Control Switch (CS) to "Purge" and hold momentarily until the green light (PURGING) comes on indicating that the purge has just begun.

6.3.2 Signoff below that the green light comes "ON".

SSE Test Engineer [Signature] /Date 9/12/95

6.3.3 Slowly adjust the purge pressure at PR-2 to a flowrate of 1.5 - 2.0 cfm as read off of (H-14-100158-7), this will trip the flowswitch (H-14-100158-7).

6.3.4 Record the pressure, off of H-14-100158-14, and the flowrate, off of H-14-100158-9, and H-14-100158-7 below where the flowswitch trips.

Pressure (H-14-100158-14): 1.5 ^{psi} ~~cm~~ Flowrate (H-14-100158-9): 2.0 cfm

Flowrate (H-14-100158-7): 2.0 cfm

SSE Test Engineer [Signature] /Date 9/12/95

6.3.5 Verify the pan and tilt and camera control unit has been plugged into Purge Control Panel switched power outlet. Turn on the power switches to the pan and tilt and camera controls.

6.3.6 On the Purge Control Panel verify the yellow light (system pressurized above 10" w.g.) is "ON".

6.3.7 Upon completion of the purge cycle verify green light is "OFF".

6.3.8 Verify that power is being provided to the pan and tilt, and camera.

6.3.9 Verify that camera lights are operational.

6.3.10 Step 6.3 is accepted [Signature] SSE Test Engineer.

6.4 SHOP TEST- MASTER CONTROL STATION

6.4.1 Set up S-VHS color monitor in accordance with owner's operation manual instructions. Monitor a scene for the test location and verify image quality.

SSE Engineer Initials [Signature]

6.4.2 Set up S-VHS video tape recorder in accordance with owner's operation manual instructions. Record a scene from the test location and verify playback.

SSE Engineer Initials [Signature]

6.4.3 Set up the color printer in accordance with owner's operation manual instructions. Print a scene from the test location and verify image quality.

SSE Engineer Initials [Signature]

6.4.4 Steps 6.4.1 through 6.4.3 are acceptable.

SSE Test Engineer: [Signature] /Date 9/12/95

6.5 SHOP TEST - CAMERA AND PAN & TILT

NOTE: During this portion of the test the SSE Test Engineer shall verify each camera control is satisfactory and will then initial in the space provided for each step.

- 6.5.1 Using the remote pan and tilt controls, pan in the clockwise direction. Verify that the pan electronic break holds .
- 6.5.2 Pan in the opposite direction. Verify that the pan electronic break holds . Verify that the panning operation has covered approximately 360°.
- 6.5.3 Tilt the camera to the extreme down position. Verify that the camera is pointing downward and that the electronic break holds .
- 6.5.4 Tilt camera up to the extreme upward position. Verify that the camera is approximately vertical and that the electronic break for the pan and tilt holds .
- 6.5.5 Using remote camera zoom control, manipulate the zoom control to wide angle. Verify the zoom moves towards wide and when operated towards "wide" .
- 6.5.6 Manipulate the zoom control to telephoto. Verify the zoom moves towards the telephoto when operated towards "tele" .
- 6.5.7 Using the remote camera iris control, manipulate the iris control to open. Verify that the iris opens when operated towards "open" .
- 6.5.8 Manipulate the iris control to close. Verify that the iris closes when operated towards "close" .
- 6.5.9 Using remote camera focus control, manipulate the focus control to far. Verify that the focus adjusts to far when operated towards "far" .
- 6.5.10 Manipulate the focus control to near. Verify that the focus adjusts to near when operated towards "near" .

6.5.16 Steps 6.5.1 through 6.5.15 are acceptable.

SSE Test Engineer: *[Signature]* / Date 9/12/95

7.0 ACCEPTANCE/OPERABILITY TEST

NOTE: Sections 7.1, 7.2, and 7.3 are performed in the 200 East Area at 241-AN Tank Farm.

7.1 PURGE PANEL ACCEPTANCE

7.1.1 Turn on breakers #3, #7, and #12 in the new distribution panel (EDS-DP-110) located inside the 241-AN-271 Instrument building.

7.1.2 Open and adjust PR-2 to 45 ± 5 psig.

7.1.3 Adjust PR-1 to 15 ± 3 in. w.g read off of pressure transmitter, H-14-100158-10. It may be necessary to open the calibration port valve, Pt. No. H-14-100158-20 (return side) to decrease pressure.

7.1.4 Step 7.1 is complete *[Signature]* SSE Test Engineer.

7.2 PURGE CONTROL PANEL ACCEPTANCE

NOTE: This portion of the test will be performed with the camera system outside the tank.

NOTE: The volume of the camera housing, purge panel lines and the hoses is approximately 2.0 ft.^3 [1.1 ft.^3 (camera volume) + $.16 \text{ ft.}^3$ (purge panel lines volume) + $.65 \text{ ft.}^3$ (hose volume)]. Per NFPA 496 requirements, ten volumes of purge gas, 20 ft.^3 , must flow through the assembly. PR-2 will be adjusted so that the flowswitch is tripped at a min. flow of 1.5 cfm through the camera system. TDR-2 is adjusted to 14 minutes ($20 \text{ ft.}^3/1.5 \text{ cfm}$) to flow 20 ft.^3 .

7.2.1 At the Purge Control Panel set the time delay relays (TDR-1 and TDR-2) to 14 minutes and turn the Control Switch (CS) to "Purge" and hold momentarily until the green light (Purge ON) comes on indicating that the purge has just begun.

7.2.2 Signoff below that the green light comes "ON".

OPS [Signature] / Date 10-25-95

SSE Test Engineer: [Signature] / Date 10-25-95

7.2.3 Verify the flow rate is 2.0 CFM as obtained from step 6.3.4 from Pt. No. H-14-100158-7.

SSE Test Engineer: [Signature] / Date 10-25-95

7.2.4 Record the pressure, off of Pt. No. H-14-100158-14, and the flowrate, off of Pt. No. H-14-100158-9 below.

Pressure/Flowrate .75 psi / 1 CFM

SSE Test Engineer: [Signature] / Date 10-25-95

7.2.5 Plug pan and tilt and camera control unit into Purge Control Panel controlled power sources. Turn on the power switches to the pan and tilt and camera controls.

7.2.6 After the purge has completed its purge cycle verify green light is "OFF" and that power is being provided to the pan and tilt and camera.

7.2.7 Verify that camera lights are operational.

7.2.8 On the Purge Control Panel, located in the 241-AN-271 Instrument building, verify the yellow light (system pressurized above 10" w.g.) is "ON".

SSE Test Engineer: [Signature] / Date 10-25-95

7.2.9 Step 7.2 is complete [Signature] SSE Test Engineer.

7.3 CAMERA AND PAN AND TILT ACCEPTANCE

NOTE: During this portion of the test the SSE Test Engineer shall verify each camera control is satisfactory and will then initial the space provided with each step.

- 7.3.1 Using remote pan and tilt controls, pan in the clockwise direction. Verify that the pan electronic break holds RAH
- 7.3.2 Pan in the opposite direction. Verify that the pan electronic break holds RAH. Verify that the panning operation has covered approximately 360°.
- 7.3.3 Tilt the camera to the extreme down position. Verify that the camera is pointing down approximately vertically and that the electronic break holds RAH
- 7.3.4 Tilt camera up to the extreme upward position. Verify that the camera is approximately vertical and that the electronic break for the pan and tilt holds RAH.
- 7.3.5 Using remote camera zoom control, manipulate the zoom control to wide angle. Verify zoom moves towards wide and when operated towards "wide" RAH
- 7.3.6 Manipulate the zoom control to telephoto. Verify zoom moves towards telephoto when operated towards "tele" RAH
- 7.3.7 Using the remote camera iris control, manipulate the iris control to open. Verify that the iris opens when operated towards "open" RAH
- 7.3.8 Manipulate the iris control to close. Verify that the iris closes when operated towards "close" RAH
- 7.3.9 Using remote camera focus control, manipulate the focus control to far. Verify that the focus adjusts to far when operated towards "far" RAH
- 7.3.10 Manipulate the focus control to near. Verify that the focus adjusts to near when operated towards "near" RAH
- 7.3.11 Plug the video monitor, video recorder and video printer into power source. Verify the video monitor, video recorder, frame store integrator and the video printer have power and are operational RAH

7.3.12 Verify that there is a color image on the Video Camera System monitor located in the 241-AN-271 Instrument building YAH. Verify that color image is acceptable per QC and Camera Cog. Engineer.

Paul M. Wren / 10-25-95
QC /Date

Ronald A. Harding / 110-25-95
SSE Test Engineer /Date

7.3.13 Turn off valve PR-2 and allow the gas to bleed off to the setpoint on PS (low pressure switch) 10 ± 2 in. w.g. Verify that power is no longer being supplied to the pan and tilt and camera. QC signoff below that power was no longer supplied to pan and tilt and camera at 10 ± 2 in. w/g.

Paul M. Wren / 110-25-95
QC /Date

7.3.14 Step 7.3 is accepted R.A. Harding SSE Test Engineer.

9.0 RECORDS

DATA/VERIFICATION LIST

NAME PRINT	NAME SIGN	INITIALS	POSITION	DATE
RONALD A. HARDING	<i>Ronald A. Harding</i>	RAH	PLANT ENGR.	10-25-95
JIM L. PASTERBERG	<i>Jim L. Pasterberg</i>	JP	ENG.	10/25/95
Paul H. Werner	<i>Paul H. Werner</i>	PHW	QC	10-25-95
David W. (Dan)	<i>David W. (Dan)</i>	PIC	Pic/OPS	10-25-95
Ryan A. Dull	<i>Ryan A. Dull</i>	RAD	Plant MGR/ESTIMATOR	11/10/95

10.0 TEST EXECUTION RECORD

REFERENCE SECTION	ACCEPT / REJECT	REMARKS
6.1	ACCEPT	
6.2	↓	
6.3		
6.4		
6.5		
7.1		
7.2		
7.3		

TEST WITNESSES:

[Signature] 10-25-95
SSE Test Engineer / Date

[Signature] 10-25-95
Quality Control / Date

[Signature] 10-25-95
Tank Farm Operations / Date

10.1 FINAL ACCEPTANCE

Testing per this procedure is completed satisfactorily and the camera is ready for installation and service.

[Signature]
East Tank Farm Manager / Date 11/10/95

11.0 POST INSTALLATION TEST

Repeat sections 7.1, 7.2, and 7.3 of this procedure to ensure that the Tank Camera Purge System and Video Camera System are operating satisfactorily after installation of the camera into the 20" multi-flange located in riser 5B. During the performance of sections 7.2 and 7.3, verify that the flowrate is the same flowrate from (H-14-100158-7) as was established in Step 6.3.4 of this procedure. Any discrepancies found with the Tank Camera Purge System and Video Camera System in accordance with this section of the ATP/OTP shall be noted below. Section 11.0 shall not be complete without SSE Test Engineers signature.

Ronald C. Harding 10-25-95
SSE Test Engineer /Date

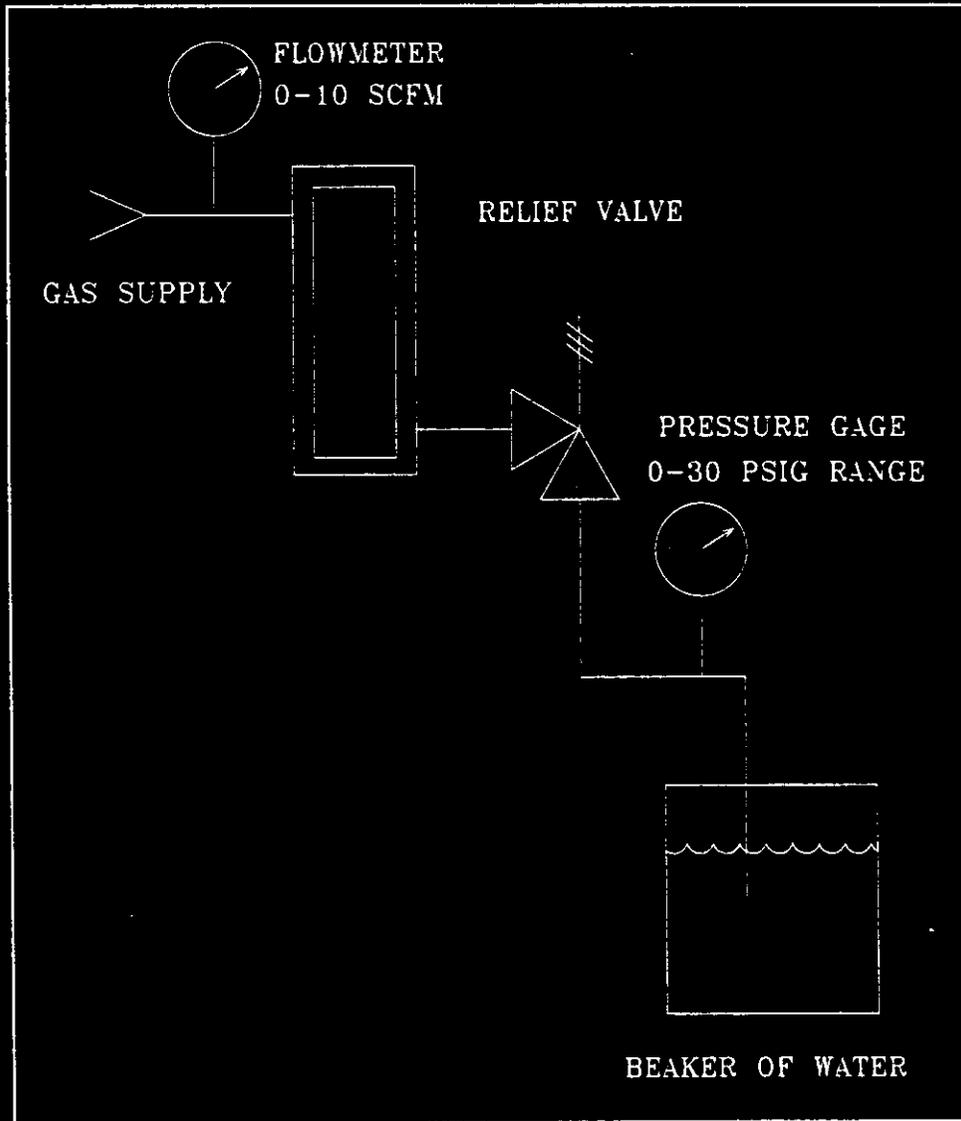


FIGURE 1

DISTRIBUTION SHEET

To Distribution	From Surveillance Systems Engineering/74770	Page 1 of 1
		Date November 16, 1995
Project Title/Work Order Acceptance/Operational Test Report for Tank 241-AN-105 Camera and Camera Purge Control System		EDT No. 601294
		ECN No.

Name	MSIN	Text With All Attach.	Text Only	Attach./ Appendix Only	EDT/ECN Only
JL Castleberry	N1-46	1			
JE Dunks	E6-27	1			
RA Harding	N1-46	1			
OB Haugen	S5-10	1			
R Leyva	N2-02	1			
TL Moore	H5-09	1			
RM Nelson	R3-01	1			
RS Nicholson	R1-67	1			
LT Pedersen	N1-46	1			
DB Smet	N1-46	1			
DW Vandyke	S5-03	1			
JJ Verderber	S1-57	1			