

## RMIS View/Print Document Cover Sheet

This document was retrieved from the Documentation and Records Management (DRM) ISEARCH System. It is intended for Information only and may not be the most recent or updated version. Contact a Document Service Center (see Hanford Info for locations) if you need additional retrieval information.

Accession #: D195061602

Document #: SD-WM-RPT-154

Title/Desc:

VAPOR & GAS SAMPLING OF SST 241U203 USING THE  
VAPOR SAMPLING SYSTEM

Pages: 39

NOV 07 1995

ENGINEERING DATA TRANSMITTAL

Page 1 of 1  
1. EDT No 612727

2. To: (Receiving Organization) DISTRIBUTION	3. From: (Originating Organization) SAMPLING AND MOBILE LABS OM624	4. Related EDT No.: N/A
5. Proj./Prog./Dept./Div.: VAPOR/HTS/SAMPLING AND MOBILE LABS	6. Cog. Engr.: RICKY MAHON 3-7437	7. Purchase Order No.: N/A
8. Originator Remarks: 241-U-203, SAMPLING USING THE VAPOR SAMPLING SYSTEM		9. Equip./Component No.: N/A
		10. System/Bldg./Facility: M0292/WSCF
11. Receiver Remarks:		12. Major Assm. Dwg. No.: N/A
		13. Permit/Permit Application No.: N/A
		14. Required Response Date: 27 OCTOBER 95

15. DATA TRANSMITTED					(F)	(G)	(H)	(I)
(A) Item No.	(B) Document/Drawing No.	(C) Sheet No.	(D) Rev. No.	(E) Title or Description of Data Transmitted	Approval Designator	Reason for Transmittal	Originator Disposition	Receiver Disposition
1	WHC-SD-WM-RPT-154	ALL	0	VAPOR AND GAS SAMPLING OF SINGLE-SHELL TANK 241-U-203 USING THE VAPOR SAMPLING SYSTEM	Q	2	1	

16. KEY		
Approval Designator (F) E, S, Q, D or N/A (see WHC-CM-3-5, Sec. 12.7)	Reason for Transmittal (G) 1. Approval 2. Release 3. Information 4. Review 5. Post-Review 6. Dist. (Receipt Acknow. Required)	Disposition (H) & (I) 1. Approved 2. Approved w/comment 3. Disapproved w/comment 4. Reviewed no/comment 5. Reviewed w/comment 6. Receipt acknowledged

17. SIGNATURE/DISTRIBUTION (See Approval Designator for required signatures)											
(G)	(H)	(J) Name	(K) Signature	(L) Date	(M) MSIN	(J) Name	(K) Signature MSIN	(L) Date	(M)	Reason	Disp
2	1	Cog. Eng.	R.D. MAHON	10/27/95	S3-27	RESOURCE CENTER		R2-12		3	
2	1	Cog. Mgr.	J.D. DORIAN	10/27/95	S3-27	JAMES L. HUCKABY		K6-80		3	
2	2	QA	C.J. STEPHAN	11/1/95	T6-03						
3			DAVE BRATZEL		S7-21						
3			JOHN DEICHMAN		T6-03						
3			RAMPUR VISWANATH		S3-90						
3			CENTRAL FILES		A3-88						

18. Signature of EDI Originator GLENN S. CAPRIO 10/27/95	19. Authorized Representative Date for Receiving Organization JOHN J. DORIAN 10/27/95	20. Contract Manager Date JOHN J. DORIAN 10/27/95	21. DOE APPROVAL (if required) Ctrl. No. <input type="checkbox"/> Approved <input type="checkbox"/> Approved w/comments <input type="checkbox"/> Disapproved w/comments
----------------------------------------------------------------	---------------------------------------------------------------------------------------------	---------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

BD-7400-172-2 (04/94) GEF097

## RELEASE AUTHORIZATION

**Document Number:** WHC-SD-WM-RPT-154, REV 0

**Document Title:** Vapor and Gas Sampling of Single-Shell Tank 241-U-203 Using the Vapor Sampling System

**Release Date:** 11/6/95

**This document was reviewed following the procedures described in WHC-CM-3-4 and is:**

**APPROVED FOR PUBLIC RELEASE**

**WHC Information Release Administration Specialist:**

  
Kara Broz

  
11/10/95

**TRADEMARK DISCLAIMER.** Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof or its contractors or subcontractors.

This report has been reproduced from the best available copy. Available in paper copy. Printed in the United States of America. To obtain copies of this report, contact:

Westinghouse Hanford Company - Document Control Services  
P.O. Box 1970, Mailstop H6-08, Richland, WA 99352  
Telephone: (509) 372-2420; Fax: (509) 376-4989

# SUPPORTING DOCUMENT

1. Total Pages **36**

2. Title

VAPOR AND GAS SAMPLING OF SINGLE-SHELL TANK 241-U-203 USING THE VAPOR SAMPLING SYSTEM

3. Number

WHC-SD-WM-RPT-154

4. Rev No.

0

5. Key Words

241-U-203  
VSS  
SUMMA  
TST  
SORBENT  
TANK

6. Author

Name: G.S. CAPRIO


*G.S. Caprio*  
Signature

Organization/Charge Code **OM624/E61920**

7. Abstract

THIS DOCUMENT PRESENTS SAMPLING DATA RESULTING FROM THE AUGUST 9, 1995, SAMPLING OF SST 241-U-203 USING THE VAPOR SAMPLING SYSTEM.

8. RELEASE STAMP

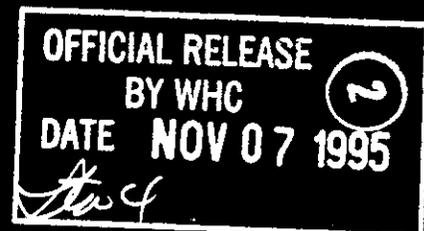

APPROVALS

Document title: Vapor and Gas Sampling of Single-Shell Tank 241-U-203  
Using the Vapor Sampling System

Approved by: *R.A. Westberg* 10/9/95  
R. A. Westberg, Field Scientist  
Vapor Sampling Project  
Sampling and Mobile Laboratories  
Date

Approved by: *Rick Mahon* 17 OCT 95  
R. D. Mahon, Project Lead  
Vapor Sampling Project  
Sampling and Mobile Laboratories  
Date

Approved by: *D.L. Edwards* 10-24-95  
D. L. Edwards, Technical Lead  
Vapor Sampling Project  
Sampling and Mobile Laboratories  
Date

CONTENTS

1.0	SCOPE . . . . .	1
2.0	SAMPLING EQUIPMENT DESCRIPTION . . . . .	1
2.1	VAPOR SAMPLING SYSTEM . . . . .	1
3.0	SAMPLING EVENT DESCRIPTION . . . . .	3
3.1	SPECIFICATIONS . . . . .	3
3.2	OPERATIONS AND SAMPLING PERSONNEL . . . . .	4
3.3	INDUSTRIAL HYGIENE FIELD RESULTS . . . . .	4
3.4	AMBIENT CONDITIONS . . . . .	4
3.5	SAMPLE COLLECTION . . . . .	4
3.6	FIELD GC/FID RESULTS . . . . .	5
3.7	RADIATION SCREENING . . . . .	6
4.0	SAMPLE CHAIN OF CUSTODY: RECEIPT, STORAGE, AND SHIPMENT . . . . .	7
5.0	QUALITY ASSURANCE AND CONTROLS . . . . .	9
5.1	VAPOR SAMPLING SYSTEM CLEANING . . . . .	9
5.2	INSTRUMENT CALIBRATION . . . . .	9
5.3	BLANK SAMPLES . . . . .	10
6.0	ANOMALIES . . . . .	11
7.0	REFERENCES . . . . .	11
APPENDICES		
A	SAMPLE LOG SHEETS . . . . .	A-1
B	AMBIENT CONDITIONS . . . . .	B-1
C	CHAIN-OF-CUSTODY FORMS . . . . .	C-1

LIST OF TABLES

1	Flow Control Calibration . . . . .	2
2	TOC Results . . . . .	5
3	Radionuclide Analysis Results . . . . .	7
4	Pacific Northwest Laboratory Samples . . . . .	8
5	Calibration Data . . . . .	10

LIST OF TERMS

CGI	Combustible Gas Indicator
COC	Chain Of Custody
DOT	U.S. Department of Transportation
GC	Gas Chromatograph
GC/FID	Gas Chromatograph/Flame Ionization Detector
GEA	Gamma Energy Analysis
HEPA	High-Efficiency Particulate Air (filter)
NH <sub>3</sub>	Ammonia
NO <sub>2</sub>	Nitrogen Dioxide
NO	Nitric Oxide
H <sub>2</sub> O	Water Vapor
OPC	Offsite Property Control
OVM	Organic Vapor Meter
PNL	Pacific Northwest Laboratory
SML	Sampling and Mobile Laboratories
SST	Single-Shell Tank
TCP	Tank Characterization Plan
team	SML Vapor Team
TOC	Total Organic Carbon
TST	Triple Sorbent Trap
VSS	Vapor Sampling System
WHC	Westinghouse Hanford Company

This page intentionally left blank.

VAPOR AND GAS SAMPLING OF SINGLE-SHELL TANK 241-U-203  
USING THE VAPOR SAMPLING SYSTEM

1.0 SCOPE

The Vapor Issue Resolution Program tasked the Sampling and Mobile Laboratories (SML) to collect representative headspace samples from Hanford Site single-shell tank (SST) 241-U-203. This document presents sampling data resulting from the August 9, 1995 sampling of SST 241-U-203. Analytical results will be presented in separate reports issued by the laboratories that supplied and analyzed the sampling media.

2.0 SAMPLING EQUIPMENT DESCRIPTION

2.1 VAPOR SAMPLING SYSTEM

The SML vapor team (the team) used the vapor sampling system (VSS) to collect representative samples of the air, gases, and vapors from the headspace of SST 241-U-203 on August 9, 1995. Mahon et al. (1994) describes in detail the VSS, its performance, and its operation. The team used the VSS to collect sorbent trap and SUMMA<sup>1</sup> canister headspace samples from SST 241-U-203. The team then sent these samples to the analytical laboratories for analysis.

The VSS comprises a mobile laboratory, a hot-water-jacketed stainless-steel probe that is inserted into the tank headspace, and stainless-steel transfer tubing that connects the mobile laboratory to the probe. A vacuum pump draws sample vapor from the tank headspace and through all transfer tubing and the sampling manifold. Electrically activated, pneumatically actuated, valves direct sample flow within the VSS. Instrumentation housed in the mobile laboratory monitors and controls system temperature, monitors absolute and differential system pressure, meters and controls vapor mass flow, and monitors sample vapor total organic carbon (TOC) content using a gas chromatograph/flame ionization detector (GC/FID).

A key feature of the VSS is its use of heated transfer tubing and a heated sampling manifold. Maintaining the system temperature at an electronically controlled, elevated temperature prevents vapor condensation and reduces vapor adsorption on surfaces exposed to sample vapor. Mahon et al. (1994) describes various tests and observations that indicate the VSS sample transfer efficiency is consistently high.

---

<sup>1</sup>SUMMA is a registered trademark of Molexics, Inc., Cleveland, Ohio.

Sorbent trap samples are collected at the sorbent trap station of the sampling manifold. Sorbent traps are pencil-size stainless-steel or glass tubes that contain vapor-adsorbing media. A known amount of sample vapor is passed through the tube, which traps (by adsorption) virtually all the target analytes. The concentration of analytes in the vapor sampled is calculated from the quantity of analyte found in the sorbent media and the volume of vapor passed through the sorbent trap.

The sorbent trap station uses highly accurate mass flow controllers to measure and control the flow rate of sample vapor through the sorbent traps. The controllers FICV-1 through FICV-9 are mounted on top of the sorbent station between the inlet and outlet valves. Controllers FICV-10 and FICV-11 are located downstream of the sorbent trap station and the in-line driers, which remove moisture from the sample vapor before it is metered. Errors associated with the mass flow controllers were determined by the Westinghouse Hanford Company (WHC) Standards Laboratory before the SST 241-U-203 sampling event (see Table 1). Flow rates and the duration of flow are specified by the analytical laboratories that supply and analyze the sorbent traps.

Table 1. Flow Control Calibration.

Flow-indicating Control valve	Typically used Flow (stdcm <sup>3</sup> /min)	% Change from 647 to Actual	% Change from Datalogger to Actual
1	200	-0.7	-0.85
2	200	0.05	-0.10
3	200	-0.45	-0.60
4	200	0.05	-0.10
5	200	0.55	0.35
6	200	0.25	0.05
7	200	0.4	0.20
8	200	0.25	-1.81
9	50	-0.128	-0.27
10	200	-1.1	-1.20
11	5000	0.332	0.17

The VSS is also equipped with a gas chromatograph (GC). The Hewlett Packard 5890 Series II GC is equipped with a flame-ionization detector (FID), a 1 mL sample loop, a 10 port injection valve, a 2 meter chromatographic column, a programmable oven, and a portable computer loaded with the HP-Chemstation<sup>2</sup> software used to control the GC. The GC is plumbed to directly transfer

<sup>2</sup> HP-Chemstation is a registered trademark of the Hewlett Packard Company, Avondale, Pennsylvania.

sample from the VSS manifold to the GC sample loop. After the sample is transferred into the sample loop and reaches equilibrium, the run is initiated manually. HP-Chemstation™ software activates the 10 port valve to transfer the sample from the sample loop to the column. The sample passes through the column and the FID generates a signal for TOC. All data is then transmitted to the computer where it is stored for further analysis.

The GC is equipped with a HP-5 column which is 2 meters long, 0.25 mm inside diameter, and which contains a 0.25 um phenyl methyl silicone phase. The GC oven is programmed to heat from 50 °C to 270 °C at a rate of approximately 70 °C per minute. Helium is the carrier gas, air and hydrogen the combustion gases, and nitrogen the make-up gas.

The GC/FID is configured to quantitatively estimate concentrations of TOC. The GC/FID confirms sampling system cleanliness, ambient air background TOC concentrations during sampling, and TOC concentration of tank vapor samples. The system is multi-point calibrated at the weather station on a as available basis, the last time being January 1995. The GC/FID has displayed a high degree of stability over a period of months. For further details, see Section 3.6, Field GC/FID Results.

The sampling manifold also has a station for sampling vapor with evacuated SUMMA™ canisters. SUMMA™ canisters are stainless-steel vessels with internal surfaces that have been prepared by the SUMMA™ process, which passivates active sites on the canister walls to minimize adsorption of gases and vapors. An analytical laboratory must clean and evacuate SUMMA™ canisters before use. The evacuated canister is filled with sample vapor through a manually operated valve, which is then closed to seal the sample inside. SUMMA™ canisters essentially allow collection and transfer of whole-air samples from the sample site to an analytical laboratory where the sample is analyzed. The standard capacity of each SUMMA™ canister is 6 liters.

### 3.0 SAMPLING EVENT DESCRIPTION

#### 3.1 SPECIFICATIONS

The Vapor Issue Resolution Program specifies sampling requirements in WHC-SD-WM-TP-335, Rev. 0E, *Vapor Sampling and Analysis Plan* (Howe 1995). The Sampling and Analysis Plan also specifies the types and number of samples to be collected, flow rates, and durations. These key sampling parameters are summarized on the sample log sheets in Appendix A. In addition to the sample log sheets, checksheets for each individual sample help ensure correct sampling procedures. SML retains these documents in the project file. This sample event's project-specific number is S5-036.

### 3.2 OPERATIONS AND SAMPLING PERSONNEL

Steve Carter was the Tank Farm Operations person-in-charge. The other SML vapor team members included:

G. S. Caprio, VSS Technician  
R. D. Mahon, VSS Lead Scientist  
R. A. Westberg, Field Scientist.

The VSS was set up at SST 241-U-203 on August 8, 1995 and was allowed to warm up overnight. Sampling began at approximately 7:00 a.m. on August 9, 1995, and was completed by 10:00 a.m. the same day.

### 3.3 INDUSTRIAL HYGIENE FIELD RESULTS

Before hooking up to SST 241-U-203, an industrial hygiene technician field tested tank vapors. The technician purged the vapor probe sample tube for 5 minutes and then field measured vapor stream contents using a combustible gas indicator (CGI) and an organic vapor meter (OVM). The measurements were verbally reported, LEL 0%, NH<sub>3</sub> 0 ppm, O<sub>2</sub> 20.6%, and total organic carbon 0.0 ppm.

### 3.4 AMBIENT CONDITIONS

The weather the day of the sampling event, August 9, 1995 was sunny and cool with light winds approximately 5 miles per hour from the northwest. Graphs of ambient temperatures and pressures taken at the Hanford Meteorological Station, which is about 2.5 miles northeast of U-Farm, are provided in Appendix B.

### 3.5 SAMPLE COLLECTION

The hot-water-jacketed sampling probe was located in Riser 2 of SST 241-U-203. The probe length, from the sample inlet to the top of the riser flange, was 6.1 meters.

All zones of the VSS were heated to 60 °C during setup of the VSS at SST 241-U-203 on August 8, 1995. The team stabilized the VSS temperature zones by 6:48 a.m. on August 9, 1995, and the system was ready to collect samples. Measured according to the VSS operating procedure, the pressure and temperature of SST 241-U-203 were 989.8 mbar (742.4 torr) and 17.7 °C, respectively. The sample log sheets in Appendix A provide a complete chronology of the sample event including start and end times, flow rates, volumes, and specific sample identifiers.

Approximately 16 hours before the first samples were collected, the team began heating the VSS transfer tubing and sampling manifold. During this warmup period, the team began a purge of all vapor transfer tubing and the sampling manifold with ambient air. Before sampling tank vapors on August 9, 1995, the

team collected two SUMMA<sup>™</sup> canister samples of ambient air, one manually 10 meters upwind of the VSS connection with SST 241-U-203, and the other using the VSS sampling manifold. The former was collected to establish background levels of trace organic vapors, and the latter was collected to establish the cleanliness of the sampling manifold.

A leak check of the VSS sampling manifold and transfer tubing (up to the connection to the sampling probe) was performed prior to opening the tank probe vapor sampling valve. The system was evacuated to 291 mbar (218.2 torr) and leakage of ambient air into the system was observed by monitoring system pressure for 15 minutes. Leakage resulted in an increase of 3.6 mbar (2.7 torr) in system pressure during the 15 minute test. Given a system volume of not more than 10 L, this pressure increase corresponds to a leak rate of approximately 8.25 mL/min at a 291 mbar (218.2 torr). This leak rate was then estimated for average SUMMA<sup>™</sup>, triple sorbent trap (TST), and sorbent sampling pressures. It was found that for the SUMMA<sup>™</sup> canisters, dilution by ambient air was approximately 0.1%, for TSTs sampled at 200 mL/min the dilution was approximately 0.3%, and for sorbent traps the dilution was approximately 0.3%.

The tank probe vapor sampling valve was opened and the VSS was purged with sample vapor from SST 241-U-203 for 30 minutes at a total flow rate of 5.5 L/min. This purge was performed to flush ambient air from the system and saturate the system's active adsorption sites. Because the volume of transfer tubing and the sampling manifold upstream of the sampling devices is estimated to be no more than 10 L, this purge provided about 16.4 air turnovers in the system.

One analytical laboratory provided sample media. Pacific Northwest Laboratory (PNL) provided SUMMA<sup>™</sup> canisters, TSTs, and sorbent traps for organic vapors, ammonia (NH<sub>3</sub>), nitrogen dioxide (NO<sub>2</sub>), and water vapor (H<sub>2</sub>O).

### 3.6 FIELD GC/FID RESULTS

The GC was single point calibrated on the day of sampling using 6.0 ppmC Propane standard by Scott Specialty Gas. The standard is an E.P.A. Protocol Gas that is  $\pm 2\%$  NIST traceable.

Table 2 displays the Field GC/FID results from the sampling of SST 241-U-203.

Table 2. TOC Results.

Number of Runs	Description	Average TOC Concentration (ppmC)	% Standard Deviation
4	Propane	6.00	0.96
4	Ambient	2.70	1.76
4	Tank Vapor	3.80	1.94

### 3.7 RADIATION SCREENING

Samples are unconditionally released from the SST farm in accordance with 1995-33300-RSP-03, *Release of Vapor Sampling Equipment* (WHC 1995c). Radiological screening results are used to determine (1) if the samples must be shipped as radioactive or nonradioactive in accordance with U.S. Department of Transportation (DOT) regulations and (2) if the samples meet the laboratory acceptance criteria.

The DOT limits for shipping a nonradioactive sample are 2,000 combined pCi/g of beta-gamma activity and alpha activity. Samples exceeding these DOT limits may be shipped as radioactive material if the samples do not exceed the following laboratory acceptance criteria:

PNL:           Beta-gamma activity <400 pCi/g of sample media. Alpha activity <100 pCi/g of sample media.

To protect the sampling manifold and sampling devices from radioactive particulates, all sample vapor for the August 9, 1995, SST 241-U-203 vapor sampling event was drawn through a series of four glass-fiber high-efficiency particulate air (HEPA) filters placed upstream of the sampling manifold. These four filters were in place any time tank vapors were flowing through the system. When sampling was complete, the filters were removed and assigned unique sample identifiers. All four HEPA filters were submitted to Laboratory 222-S for total alpha, total beta, and gamma energy analysis (GEA). The HEPA filter closest to the sampling manifold was analyzed to determine if the samples met DOT shipping criteria and laboratory acceptance criteria. Moisture from the tank vapors was collected in a silica gel trap through one of the sorbent station ports and analyzed for tritiated water. SST 241-U-203 filter and silica gel analysis results are shown in Table 3. SML scientists use the activity results in Table 3 to calculate pCi/g of sample media. SML maintains this information in the project-specific file. The results in Table 3 indicate that the samples collected from SST 241-U-203 met the laboratory acceptance criteria and the DOT definition of a nonradioactive shipment.

Table 3. Radionuclide Analysis Results.

Filter	Sample Identifier	Activity Results <sup>a</sup> (pCi/sample)	Activity <sup>b</sup> (pCi/L of tank gas)
Upstream HEPA filter (box)	S5036-A28.OU1	Total Alpha = 10.2 Total Beta = 41.6 GEA = <detectable	= 0.03 = 0.11 = <detectable
Downstream HEPA filter (box)	S5036-A29.OU1	Total Alpha = 3.49 Total Beta = 5.00 GEA = <detectable	= 0.009 = 0.013 = <detectable
Upstream HEPA filter (VSS)	S5036-A30.OU2	Total Alpha = 3.08 Total Beta = 3.49 GEA = <detectable	= 0.008 = 0.009 = <detectable
Downstream HEPA filter (VSS)	S5036-A31.OU2	Total Alpha = 0.86 Total Beta = <1.97 GEA = <detectable	= 0.002 = <0.005 = <detectable
Tritium trap	S5036-A03.OT1	Total activity = <50.0	= <50.0 <sup>c</sup>

## Notes:

The samples are nonradioactive. These results were evaluated against laboratory acceptance criteria and DOT limits.

<sup>a</sup>All less than (<) values represent the minimum detection limits at Laboratory 222-8.

<sup>b</sup>Numbers based on an approximation of the total volume of tank vapor through the HEPA filters. Appendix A and the sample checksheets were used to estimate a total flow through the VSS of 394 L.

<sup>c</sup>Number is calculated using a total volume of 1 L passing through the tritium trap.

#### 4.0 SAMPLE CHAIN OF CUSTODY: RECEIPT, STORAGE, AND SHIPMENT

All sorbent trains, sorbent tubes, and SUMMA<sup>™</sup> canisters received from PNL are kept in a custody locked storage area maintained by SML. Sorbent trains and tubes were maintained at  $4 \pm 2$  °C in a refrigeration unit. SUMMA<sup>™</sup> canisters were stored in the same locked storage area, but were not refrigerated. These sampling devices were picked up from PNL by SML and transported in a government vehicle to a custody locked storage area.

After sampling, the PNL sorbent tubes and SUMMA<sup>™</sup> canisters were transported by government vehicle directly to PNL and delivered to J. A. Edwards on August 14, 1995. Table 4 lists the sample identifiers, sample types, and COC form numbers for all PNL samples.

Table 4. Pacific Northwest Laboratory Samples.

Sample Identifier	Sample Type	COC Number
S5036-A01.006	Ambient upwind SUMMA™	009242
S5036-A02.007	Ambient SUMMA™ (VSS)	009242
S5036-A04.008	SUMMA™	009242
S5036-A12.009	SUMMA™	009242
S5036-A20.012	SUMMA™	009242
S5036-A08.44T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A09.45T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A10.46T	NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A11.47T	NH <sub>3</sub> /H <sub>2</sub> O/H <sub>2</sub> O sorbent	009244
S5036-A16.48T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A17.49T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A18.50T	NO <sub>x</sub> /H <sub>2</sub> O sorbent	009244
S5036-A19.51T	NH <sub>3</sub> /H <sub>2</sub> O/H <sub>2</sub> O sorbent	009244
S5036-A25.52T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O field blank	009244
S5036-A26.53T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O field blank	009244
S5036-A27.54T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O field blank	009244
S5036-A05.607	PNL TST	009243
S5036-A06.608	PNL TST	009243
S5036-A07.609	PNL TST	009243
S5036-A13.610	PNL TST	009243
S5036-A14.611	PNL TST	009243
S5036-A15.612	PNL TST	009243
S5036-A21.613	PNL TST Field Blank	009243
S5036-A22.614	PNL TST Field Blank	009243
S5036-A23.615	PNL TST Trip Blank	009243
S5036-A24.616	PNL TST Trip Blank	009243

From the time that samples are received by SML until they are shipped back to the analytical laboratory, all COCs are maintained by SML in accordance with WHC-IP-1127-1.3, *Chain-of-Custody/Special Analysis Request for RCRA and CERCLA Protocol Samples* (WHC 1995a). Copies of the completed COC forms for this sampling event are included in Appendix C.

## 5.0 QUALITY ASSURANCE AND CONTROLS

### 5.1 VAPOR SAMPLING SYSTEM CLEANING

Immediately prior to sampling of SST 241-U-203, the VSS manifold and vapor sample transfer tubing was heated to 60 °C and ambient air was purged through the system for 15 hours. Also, all pertinent system valves were actuated to release any contaminants that may have collected in the VSS valves themselves. After this purge an ambient air sample was drawn through the VSS manifold and a GC/FID run was initiated. No significant level of contaminants was detected. A second ambient air GC/FID run confirmed that the VSS manifold and transfer tubing was free of organic remnant residue down to ambient levels. A SUMMA<sup>™</sup> canister ambient air sample was then collected to confirm by laboratory analysis that the VSS sampling manifold was free of trace organic contaminants (or to determine which contaminants were present and at what concentration), as discussed in Section 3.5. For further details, refer to Appendix E of WHC-IP-1127-4.10 (WHC 1995b) and the project-specific file located with SML.

The hot-water-jacketed probe was initially cleaned in compliance with LO-080-405/A0, *Vapor Space Probe Cleaning Procedure* (WHC 1993) the team cleaned the hot-water-jacketed probe before it was installed in SST 241-T-111. This procedure requires a solvent rinse of all internal probe surfaces with acetone and methanol to clear the sample line of possible contamination remaining from the construction process. The probes are then heated to 90 °C, and dry air is passed through the probe to evaporate the solvents. Before the probes are released, the team ensures by a hand-held organic vapor meter that the total organic concentration in the sample line is below 1 ppmv. Following the sampling of 241-T-111 the probe was removed and transferred to U Farm. Before installation in 241-U-203 the probe was recleaned in accordance with Appendix E of WHC-IP-1127-4.10 (WHC 1995b).

### 5.2 INSTRUMENT CALIBRATION

Instruments located in the VSS are calibrated on an annual basis at the WHC Standards Laboratory. VSS instrumentation calibration data, maintained in files by SML, are summarized in Table 5. According to the calibration schedule shown in Table 5, all instrumentation was within its calibration period during the SST 241-U-203 sampling event.

Table 5. Calibration Data.

Element	Calibration Date	Expiration Date	WHC Standards Laboratory Code
FICV-1	5/08/95	5/08/96	518-28-03-012
FICV-2	5/08/95	5/08/96	518-28-03-008
FICV-3	5/08/95	5/08/96	518-28-03-004
FICV-4	5/08/95	5/08/96	518-28-03-006
FICV-5	5/08/95	5/08/96	518-28-03-011
FICV-6	5/08/95	5/08/96	518-28-03-009
FICV-7	5/08/95	5/08/96	518-28-03-014
FICV-8	5/08/95	5/08/96	518-28-03-013
FICV-9	5/08/95	5/08/96	518-28-03-007
FICV-10	5/08/95	5/08/96	518-28-03-010
FICV-11	5/08/95	5/08/96	518-28-03-005
PE-1	5/04/95	5/04/96	518-80-02-005
PE-2	5/04/95	5/04/96	518-80-02-006
PE-3	5/04/95	5/04/96	518-80-02-008
PE-4	5/04/95	5/04/96	518-80-02-007
PD-1	5/04/95	5/04/96	518-80-02-004
PD-2	5/04/95	5/04/96	518-80-02-003
Temperature Control System	3/30/95	3/30/96	804-67-74-009

### 5.3 BLANK SAMPLES

Trip blanks are samples that accompany the sample media from the point of generation through sample analysis. They are transported to the field with the sample collection media but remain unopened during the sampling event. Analysis of trip blanks is used to assess cross-contamination of sample media during field transport and storage.

Field blanks are sampling devices similar to trip blanks. They are prepared and handled in the same manner as the sampling media, but no tank vapors are drawn through them.

Spiked blanks are prepared as regular sampling media but also contain a known amount of special analyte. Tank vapors are drawn through these blanks and

they are handled and analyzed just like any other sample. Analysis of the spiked blanks is used to evaluate potential sample loss during shipment or storage.

Ambient blanks are samples of ambient air collected at the sampling location. Analysis of ambient blanks is used to assess contamination that may be present in the atmosphere or in the transfer tubing or sampling manifold of the VSS immediately prior to sampling operations.

Table 4 lists sample blanks used during the sampling of SST 241-U-203.

## 6.0 ANOMALIES

All samples were collected in accordance with the Tank Characterization Plan (TCP) and WHC-IP-1127-4.10, *Collection of Parallel Sorbent Tube and SUMMA Canister Samples Using the Vapor Sampling System* (1995b). There were no anomalies during the sample collection process.

## 7.0 REFERENCES

- 49 CFR 100-177, 1992, "Transportation," *Code of Federal Regulations*, as amended.
- Homi, C. S., 1995, *Vapor Sampling and Analysis Plan*, WHC-SD-WM-TP-335, Rev. 0E, Westinghouse Hanford Company, Richland, Washington.
- Mahon, R. D., C. M. Jones, and M. S. Story, 1994 (draft), *Evaluation of the Capabilities and Use of the Vapor Sampling System for Tank Headspace Sampling and Characterization*, SD-WM-RPT-094, Westinghouse Hanford Company, Richland, Washington.
- WHC, 1995a, *Chain-of-Custody/Special Analysis Request for RCRA and CERCLA Protocol Samples*, Procedure WHC-IP-1127-1.3, Rev. 1, Westinghouse Hanford Company, Richland, Washington.
- WHC, 1995b, *Collection of Parallel Sorbent Tube and SUMMA Canister Samples Using the Vapor Sampling System*, Procedure WHC-IP-1127-4.10, Westinghouse Hanford Company, Richland, Washington.
- WHC, 1995c, *Release of Vapor Sampling Equipment*, Procedure 1995-33300-RSP-03, Westinghouse Hanford Company, Richland, Washington.
- WHC, 1993, *Vapor Space Probe Cleaning Procedure*, Procedure LO-080-405/A0, Westinghouse Hanford Company, Richland, Washington.

This page intentionally left blank.

**APPENDIX A**  
**SAMPLE LOG SHEETS**

This page intentionally left blank.



Waste Tank  
241-U-303

WHC Sample ID	PNL Sample ID	Port Valve #	Description	Desired		Actual		Desired Total Flow SCCM	Actual Flow Rate SCCM	Actual		Actual Total Time (min.)	Actual Total Flow Liters
				Flow Rate SCCM	Duration (min.)	Start Time	End Time						
S5036-A05.607	TST#607	1	TST #1	200	5	200.00	08:58	1000	200.00	09:03	5	1.00	
S5036-A06.608	TST#608	2	TST #2	200	5	200.00	08:58	1000	200.00	09:03	5	1.00	
S5036-A07.609	TST#609	3	TST #3	200	5	199.40	08:58	1000	199.40	09:03	5	1.00	
S5036-A03.0T1	T-2286 (222-S)	4	Tritium Trap	200	5	200.00	08:58	1000	200.00	09:03	5	1.00	
S5036-A08.44T	44T	5	NH3/NOx/H2O (#1)	200	15	200.00	08:58	3000	200.00	09:13	15	3.00	
S5036-A09.46T	46T	6	NH3/NOx/H2O (#2)	200	15	200.00	08:58	3000	200.00	09:13	15	3.00	
S5036-A10.46T	46T	7	NOx/H2O (#3)	200	15	192.40	08:58	3000	192.40	09:13	15	2.89	
S5036-A11.47T	47T	8	NH3/H2O/H2O (#4)	200	15	199.30	08:58	3000	199.30	09:13	15	2.99	
GCRUN #4 (Tank run # 2)							09:16						
S5036-A12.009	009	13	SUMMA #4		1		09:21			09:22		6.00	
S5036-A13.610	TST#610	1	TST #4	200	5	200.00	09:24	1000	200.00	09:29	5	1.00	
S5036-A14.611	TST#611	2	TST #5	200	5	200.00	09:24	1000	200.00	09:29	5	1.00	
S5036-A15.612	TST#612	3	TST #6	200	5	196.60	09:24	1000	196.60	09:29	5	0.98	
S5036-A16.48T	48T	5	NH3/NOx/H2O (#5)	200	15	200.00	09:24	3000	200.00	09:39	15	3.00	
S5036-A17.49T	49T	6	NH3/NOx/H2O (#6)	200	15	200.00	09:24	3000	200.00	09:39	15	3.00	
S5036-A18.50T	50T	7	NOx/H2O (#7)	200	15	192.50	09:24	3000	192.50	09:39	15	2.89	
S5036-A19.51T	51T	8	NH3/H2O/H2O (#8)	200	15	198.50	09:24	3000	198.50	09:39	15	2.98	
GCRUN #5 (Tank run #3)							09:41						
S5036-A20.012	012	15	SUMMA #5		1		09:45			09:46	1	6.00	

Waste Tank  
241-U-283

WHC Sample ID	PNL	Port	Description	Desired Flow Rate SCCM	Desired Duration (min.)	Desired Total Flow SCCM	Actual Start Time	Actual End Time	Actual Total Time (min.)	Actual Total Flow Liters
---------------	-----	------	-------------	------------------------	-------------------------	-------------------------	-------------------	-----------------	--------------------------	--------------------------

S5036-A21.613	TST#613	1	TST FIELD BLANK #1				09:31	09:32		
S5036-A22.614	TST#614	2	TST FIELD BLANK #2				09:31	09:32		
S5036-A25.52T	52T	5	NH2NO2/H2O FIELD BLANK#1				09:45	09:46		
S5036-A26.53T	53T	6	NH2NO2/H2O FIELD BLANK#2				09:45	09:46		
S5036-A27.54T	54T	7	NH2NO2/H2O FIELD BLANK#3				09:45	09:46		

GCRUN#6 (Tank run # 4)

15

TOTAL TANK GAS USED DURING SAMPLING RUNS

48.72

S5036-A28.OU1	T-2282 ( 222S)		Upstream HEPA(box)							
S5036-A29.OU1	T-2283 ( 222S)		Downstream HEPA(box)							
S5036-A30.OU2	T-2284 ( 222S)		Upstream HEPA(VSS)							
S5036-A31.OU2	T-2285 (222S)		Downstream HEPA (VSS)							

Trip Blanks (DO NOT EXPOSE)

S5036-A23.615	TST#615		TST TRIP #1							
S5036-A24.616	TST#616		TST TRIP #2							

U-203  
TOTAL TANK VAPOR USED

	NUMBER OF EVENTS	TIME IN MINUTES	VOLUME IN SCCM	TOTAL VOLUME, LITERS
LEAK CHECKS	1	0	5600	5.60
TANK PURGE PUMP DOWNS	3	1	5600	16.80
TANK PURGE TIME (From Spreadsheet)	1	46	5500	253.00
GC PURGES	4	2	5000	40.00
SUMMA PURGES	3	2	5000	30.00
ALL SAMPLES COLLECTED				48.72
TOTAL FOR TANK SAMPLING RUN				394.12




This page intentionally left blank.

**APPENDIX B**  
**AMBIENT CONDITIONS**

This page intentionally left blank.

WEATHER DURING VSS SAMPLING OF 241-U-203

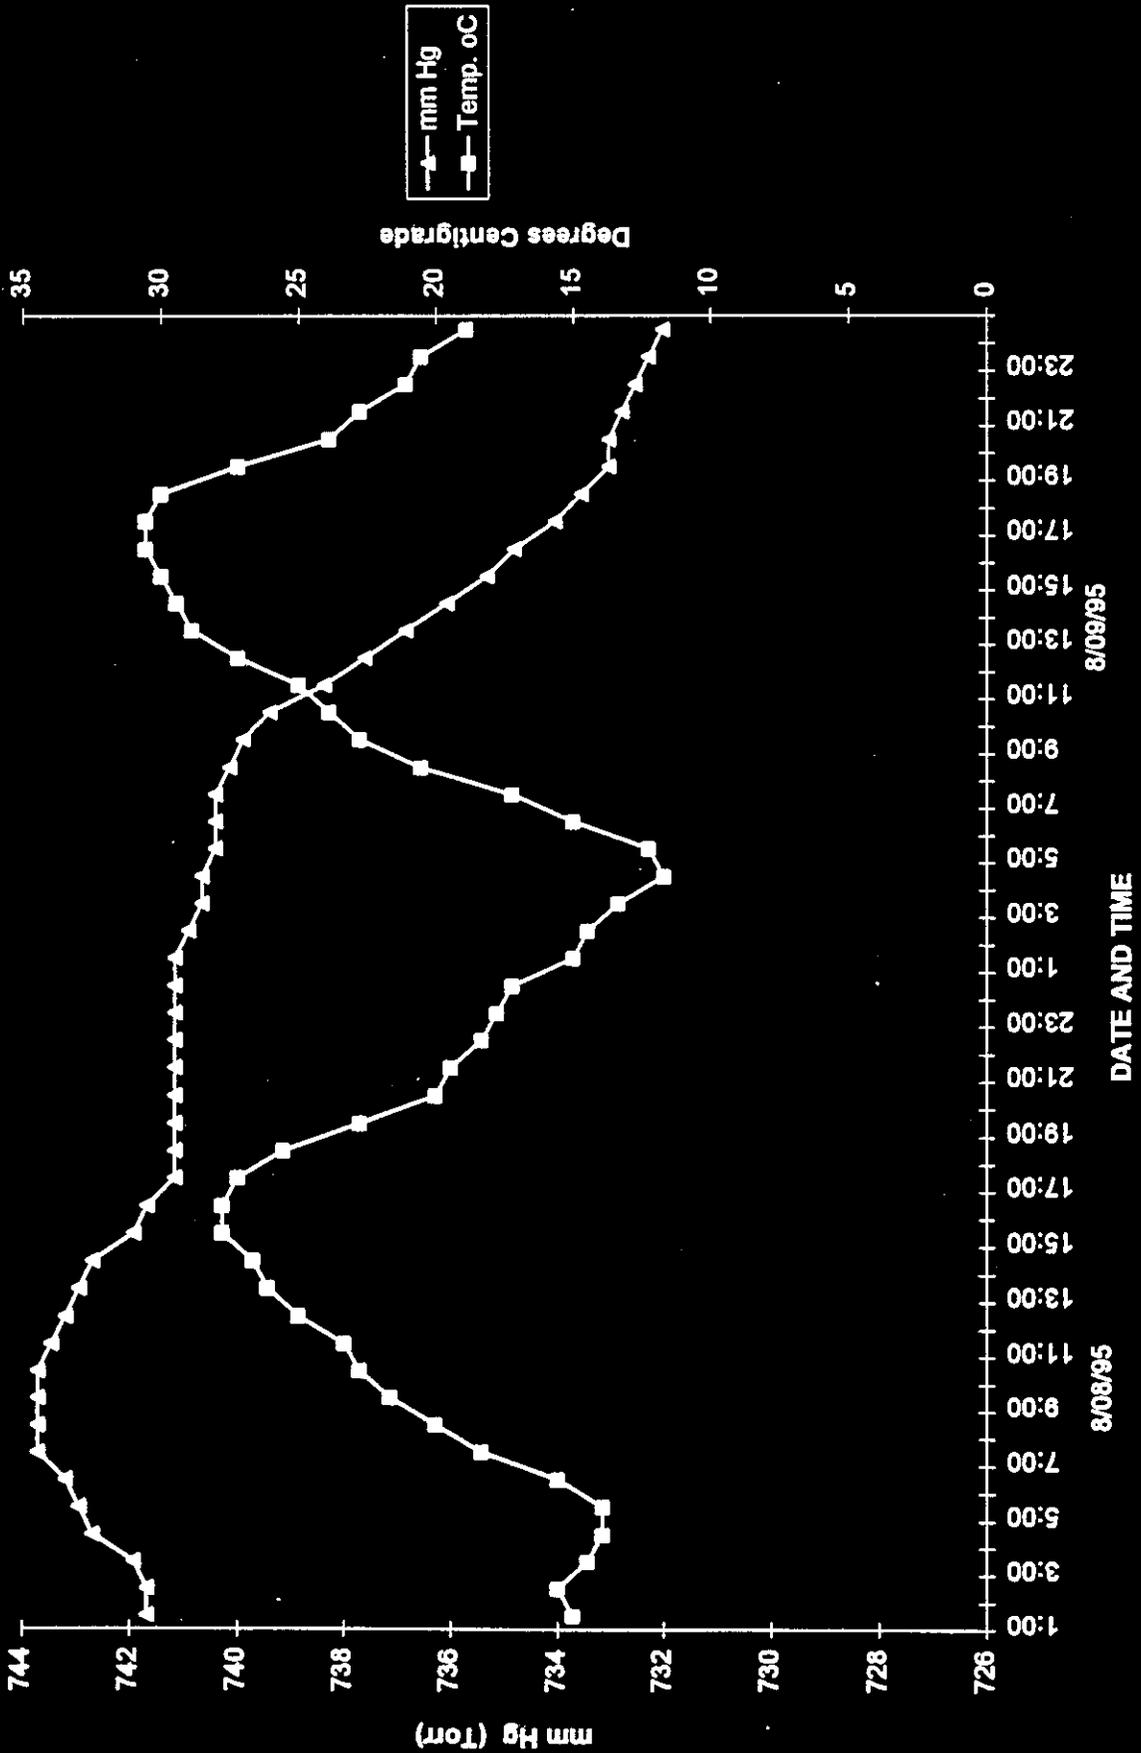

This page intentionally left blank.

**APPENDIX C**  
**CHAIN-OF-CUSTODY FORMS**

This page intentionally left blank.

# CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST

Westinghouse Hanford Company		COC# 009489	
Collector <i>RD Mahon</i>		Page <i>1</i> of <i>1</i>	
SAF Number <i>S5036</i>		MISN <i>S3-27</i> FAX <i>3-7076</i>	
Project Title <i>VSS Vapor Sampling of U-203</i>		Purchase Order/Charge Code <i>E61638</i>	
Shipped To (Lab) <i>222-S Labs</i>		Ics Chest # <i>NA</i> Temp. <i>NA</i>	
Protocol <i>None</i>		Bill of Lading/Air Bill No. <i>NA</i>	
Data Transmitted <i>Next Day</i>		Offsite Property No. <i>NA</i>	

Sample No.	Lab ID	Date	Time	NA Type Container	Sample Analysis	Preservative
<i>S5036041</i>	<i>T-2282</i>	<i>X 9/4/95</i>	<i>1000</i>	<i>(1) MEPA</i>	<i>TA/TB/GEA</i>	<i>NA</i>
<i>S5036041</i>	<i>T-2283</i>	<i>X 9/4/95</i>	<i>1000</i>	<i>(1) MEPA</i>	<i>TA/TB/GEA</i>	<i>NA</i>
<i>S5036042</i>	<i>T-2284</i>	<i>X 9/4/95</i>	<i>1000</i>	<i>(1) MEPA</i>	<i>TA/TB/GEA</i>	<i>NA</i>
<i>S5036042</i>	<i>T-2285</i>	<i>X 9/4/95</i>	<i>1000</i>	<i>(1) MEPA</i>	<i>TA/TB/GEA</i>	<i>NA</i>
<i>S5036071</i>	<i>T-2286</i>	<i>X 9/4/95</i>	<i>0800</i>	<i>(1) Silica Gel</i>	<i>Total Activity</i>	<i>NA</i>
				<i>( )</i>		
				<i>( )</i>		
				<i>( )</i>		
				<i>( )</i>		
				<i>( )</i>		
				<i>( )</i>		
				<i>( )</i>		

COPY

RMA 8-9-95

POSSIBLE SAMPLE HAZARDS/REMARKS List all known hazards.		SPECIAL INSTRUCTIONS Please fax info to Tim Utecht at 373-7076 Thanks	
Requisitioned By <i>Rick Mahon</i>	Date/Time <i>9/4/95/1330</i>	Received By <i>Rm Arnold RMA</i>	Date/Time <i>8-9-95 1330</i>
Requisitioned By <i>Rm Arnold RMA</i>	Date/Time <i>8-9-95 1400</i>	Received By <i>Tim Utecht</i>	Date/Time <i>8-9-95</i>
Requisitioned By	Date/Time	Received By	Date/Time

Matrix * S = Soil SE = Sediment SO = Solid SL = Sludge W = Water O = Oil A = Air	Matrix * DS = Drums Solids DL = Drums Liquids T = Tissue WI = Wipe L = Liquid V = Vegetation O = Other
-------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------

Disposed By Disposed Method e.g. Return to customer, per lab procedure, used in process.	Date/Time
---------------------------------------------------------------------------------------------	-----------

FINAL SAMPLE DISPOSITION	Date/Time
--------------------------	-----------

**Battelle Pacific Northwest Laboratory**

**CHAIN OF CUSTODY**

**WHC 009243**

Custody Form Initiator J. A. Edwards - PNL

Telephone (509) 373-0141  
Page 85-3009 / P8-08 / FAX 376-0418

Company Contact R. D. Mahon - WHC

Telephone (509) 373-7437  
Page 85-9658 / S3-27 / FAX 373-7076

Project Designation/Sampling Locations 200 West Tank Farm  
241-U-203 Tank Vapor Sample SAF S5036  
(VSS Truck)

Collection date 08 - 09 - 95  
Preparation date 07 - 20 - 95

Ice Chest No.

Field Logbook No. WHC-AL-647.10

Entco Hi/Lo thermometer No. PNL-T-003

Bill of Lading/Airbill No. N/A

Offsite Property No. N/A

Method of Shipment Government Truck

Shipped to WHC

Possible Sample Hazards/Remarks Unknown at time of sampling

**Sample Identification**

S5036 - A05 . 607	PNL Triple Sorbent Trap (TST) Sample # 1	
S5036 - A06 . 608	PNL TST Sample # 2	
S5036 - A07 . 609	PNL TST Sample # 3	
S5036 - A13 . 610	PNL TST Sample # 4	
S5036 - A14 . 611	PNL TST Sample # 5	
S5036 - A15 . 612	PNL TST Sample # 6	
S5036 - A21 . 613	Open, close & store PNL TST Field Blank # 1	In VSS truck
S5036 - A22 . 614	Open, close & store PNL TST Field Blank # 2	In VSS truck
S5036 - A23 . 615	Store PNL TST Trip Blank # 1	None
S5036 - A24 . 616	Store PNL TST Trip Blank # 2	None

Field Transfer of Custody

Chain of Possession

(Sign and Print Names)

Relinquished By	Date	Time	Received By	Date	Time
J A Edwards / T.B. Utecht	08-03-95	1330	T B Utecht / J A Edwards	08-03-95	1330
T.B. Utecht / J.A. Edwards	08-14-95	0920	J.A. Edwards / J.A. Edwards	08-14-95	0920

**Final Sample Disposition**

**Comments:**

**PNL (only) Checklist**

- 0 Media labeled and checked?  Y/N
- 0 Letter of instruction?  Y/N
- 0 Media in good condition?  Y/N
- 0 COC info/signatures complete?  Y/N
- 0 Sorbents shipped on ice? (<5°C)  Y/N
- 0 Hi/Lo thermometer - *Keep upright!*  Y/N
- 0 Hi/Lo thermometer /  Y/N
- 0 Rad release stickers on samples? /  Y/N
- 0 Activity report from 222S? /  Y/N
- 0 COC copy for LRB, RIDS filed? /  Y/N

POC  POC

**Comments:**

Cooler Temperature Status	
Hi -15 °C / Lo -15 °C	(pick up at PNL to WHC)
Hi 6 °C / Lo 5 °C	(delivery at WHC from PNL)
Hi _____ °C / Lo _____ °C	(at return to PNL from WHC)
Hi 3 °C / Lo 3 °C	(at delivery from WHC to PNL)

(Revised 06/21/95 PNL)

**Battelle  
Pacific Northwest Lab**

**CHAIN OF CUSTODY**

**WHC 009242**

Custody Form Initiator **J. A. Edwards - PNL**

Telephone (509) 373-0141  
Page 85-3009 / FAX 376-0418

Company Contact **R. D. Mahon - WHC**

Telephone (509) 373-2891  
Page 85-3152 / FAX 373-3793

Project Designation/Sampling Locations **200 West Tank Farm  
241-U-203 Tank Vapor Sample SAF S5036  
(VSS Truck)**

Collection date **08 - 09 - 95**  
Preparation date **08 - 01 - 95**

Ice Chest No.

Field Logbook No. **WHC-AL-447-10**

Bill of Lading/Airbill No. **N/A**

Offsite Property No. **N/A**

Method of Shipment **Government Truck**

Shipped to **PNL**

Possible Sample Hazards/Remarks **Unknown at time of sampling**

**Sample Identification**

<b>S5036 - A01 . 006</b>	<b>Ambient Air SUMMA #1 Upwind of U-203</b>
<b>S5036 - A02 . 007</b>	<b>Ambient Air SUMMA #2 Through Port # 15</b>
<b>S5036 - A04 . 008</b>	<b>SUMMA #3 Port # 15</b>
<b>S5036 - A12 . 009</b>	<b>SUMMA #4 Port # 15</b>
<b>S5036 - A20 . 012</b>	<b>SUMMA #5 Port # 13</b>

[ ] Field Transfer of Custody			[ ] Chain of Possession			(Sign and Print Names)		
Relinquished By	Date	Time	Received By	Date	Time	Received By	Date	Time
<i>J A Edwards</i>	<b>08-03-95</b>	<b>1330</b>	<i>T B Utecht</i>	<b>08-03-95</b>	<b>1330</b>	<i>T B Utecht</i>	<b>08-03-95</b>	<b>1330</b>
<i>T B Utecht</i>	<b>08-14-95</b>	<b>0915</b>	<i>J A Edwards</i>	<b>08-14-95</b>	<b>0915</b>	<i>J A Edwards</i>	<b>08-14-95</b>	<b>0915</b>

**Final Sample Disposition**

Comments:

<b>PNL (only) Checklist</b>	<b>Pick-up / Delivery</b>	<b>Comments:</b>
0 Media labeled and checked?	0/N	
0 Letter of instruction?	0/N	
0 Media in good condition?	0/N / 0/N	
0 COC info/signatures complete?	0/N / 0/N	
0 Rad release stickers on samples?	0/N / 0/N	
0 Activity report from 222S?	0/N / 0/N	
0 COC copy for LRB, RIDS filed?	0/N / 0/N	
	POC <i>(Signature)</i>	POC <i>(Signature)</i>

(Revised 10/17/94 PNL)

**Battelle Pacific  
Northwest Laboratory**

**CHAIN OF CUSTODY**

**WHC 009244**

Custody Form Initiator **J. A. Edwards - PNL**

Telephone (509) 373-0141  
Page 85-3009 / FAX 376-0418

Company Contact **R. D. Mahon - WHC**

Telephone (509) 373-2891  
Page 85-3152 / FAX 373-3793

Project Designation/Sampling Locations **200 West Tank Farm  
241-U-203 Tank Vapor Sample SAF S5036  
(VSS Truck)**

Collection date **08-09-95**  
Preparation date **08-01-95**

Ice Chest No.

Field Logbook No. **WHC-NL-64710**

Bill of Lading/Airbill No. **N/A**

Offsite Property No. **N/A**

Method of Shipment **Government Truck**

Shipped to **WHC**

Possible Sample Hazards/Remarks **Unknown at time of sampling**

**Sample Identification**

S5036 - A08 . 44T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 1)
S5036 - A09 . 45T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 2)
S5036 - A10 . 46T	NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 3)
S5036 - A11 . 47T	NH <sub>3</sub> /H <sub>2</sub> O/H <sub>2</sub> O	(INORG Sorbent Trap # 4)
S5036 - A16 . 48T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 5)
S5036 - A17 . 49T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 6)
S5036 - A18 . 50T	NO <sub>x</sub> /H <sub>2</sub> O	(INORG Sorbent Trap # 7)
S5036 - A19 . 51T	NH <sub>3</sub> /H <sub>2</sub> O/H <sub>2</sub> O	(INORG Sorbent Trap # 8)
S5036 - A25 . 52T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Field Blank # 1)
S5036 - A26 . 53T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Field Blank # 2)
S5036 - A27 . 54T	NH <sub>3</sub> /NO <sub>x</sub> /H <sub>2</sub> O	(INORG Field Blank # 3)

[ ] Field Transfer of Custody		[ ] Chain of Possession		(Sign and Print Names)		
Relinquished By	Date	Time	Received By	Date	Time	
G W Dennis <i>G.W. Dennis</i>	08-03-95	1145	J A Edwards <i>J A Edwards</i>	08-03-95	1145	
J A Edwards <i>J A Edwards</i>	08-03-95	1350	T B Utecht <i>T B Utecht</i>	08-03-95	1350	
<i>T B Utecht</i>	08-14-95	0930	<i>J A Edwards</i>	8-14-95	0930	

**Final Sample Disposition**

Comments:

PNL (only) Checklist	Pick-up / Delivery	Comments:
0 Media labeled and checked?	0/N	
0 Letter of instruction?	0/N	
0 Media in good condition?	0/N / 0/N	
0 COC info/signatures complete?	0/N / 0/N	
0 Sorbents shipped on ice? (<10°C)	0/N / 0/N	
0 Rad release stickers on samples?	0/N / 0/N	
0 Activity report from 222S?	0/N / 0/N	
0 COC copy for LRB, RIDS filed?	0/N / 0/N	
0 COC copy for sorbent follow-on?	0/N / 0/N	Original COC follows sorbent media
	POC <i>[Signature]</i>	